

# Alarmed Retractor Installation Instructions



Ensure that the area where the Alarmed Retractor is being attached is clean. Remove the adhesive film at the bottom of the unit and attach to the surface.

Using the allen key, loosen the screw located on the collar closest to the sensor, adjust the length of the cable as required and re-tighten the screw (Ensuring not to overtighten).

Using the allen key, loosen the screw on the back of the loop sensor to release the cable. Pass the sensor through a closed loop on the product being protected, re-insert the cable into the slot on the sensor, close and re-tighten the screw.

Point the remote close to the Alarmed Retractor and press the ON button. The LED will flash and there will be an audible sound, the alarm is now activated. The orange LED on the Alarm Retractor will flash every 8-10 seconds to show the unit is active.

## Alarm Activation

- If the alarm activates an audible sound will be heard and the LED on the alarmed retractor will flash. Press the OFF button on the remote which will silence the alarm.
  - If the alarm condition is a problem with the sensor cable the alarmed retractor will set automatically when the issue is resolved and there will be an audible sound for confirmation.
- If the alarm condition is caused by the anti tamper being released on the base, re-secure the retractor to its position and press the ON button on the remote, an audible confirmation will be heard.
  - The system is now armed.