

Independent Controller Installation Instructions



Installation

Remove the battery film from the base of the controller and secure the alarmed controller in the desired location using the double sided adhesive pad, making sure the anti-tamper button is depressed. Press the arm button on the remote control and there will be an audible confirmation that the system is armed.

Using the tool provided remove the cover on the controller by releasing the location screw. Connect the sensor cables to the controller, then replace and secure the cover being careful not to overtighten the location screw.

Alarm Activation

- If the alarm activates an audible sound will be heard. The LED on the alarmed controller and sensor cable will flash. If the anti-tamper button on the controller is released an audible sound will be heard only.
 - Press the mute button on the remote control which will silence the controller.
- If the alarm condition is a problem with the sensor cable the alarmed controller will set automatically when the issue is resolved and there will be an audible sound for confirmation.
- If the alarm condition is caused by the anti tamper being released on the base, once the controller is re-secured to its position, press the arm button on the remote, an audible confirmation will be heard.
 - The system is now armed.

